


**INSTALLATION INSTRUCTIONS:**  
**AviGard® Crop Structure Bird Nets**

**STEP 1 Open Net Completely**

To install AviGard Crop Structure Bird Nets, s-t-r-e-t-c-h the net open to its full installed dimensions on the ground before attempting to drape net on hoops, scaffolds or other supports. Each corner of the net is marked with a white flag. Find one corner and anchor it to the ground before attempting to stretch the net open. After anchoring the 1st corner, move to an adjacent corner (not the the diagonal or opposite corner) and pull net open until meshes take on a uniform square shape. Anchor this corner and repeat for remaining two corners.


**STEP 2 Protect Net Against Abrasion**

Protect your Crop Structure Nets against abrasion and chaffing and to extend field life by “softening” sharp edges of support poles and other supports that will be in direct contact with the netting. This can be accomplished by attaching pieces of soft materials like carpet or smooth, snag-free surfaces at stress-points where the net is attached. Because AviGard Crop Structure nets can remain in place continuously for 10 years the more U.V. resistant (and smooth) the post cover material is, the longer and better the protection against abrasion and chaffing.

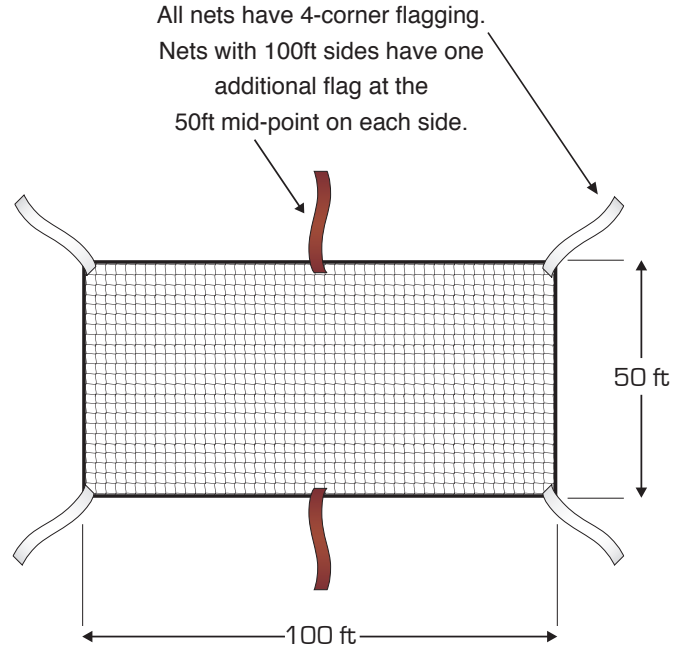

**NETTING SUPPORT EXAMPLES**

**Plastic Or Metal Hoop Supports**

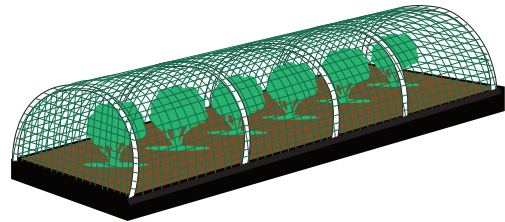

**Wood or Metal Frame With Wire Supports**

